

Smart touche freestanding can opener



- **Removable blade for washing**
- **Equipped with a bottle opener**

Completely automatic : press the button and it opens a tin. No more struggling with stiff pull tabs when preparing your meals. Very hygienic system : the blade is removable and dishwasher safe. Equipped with a bottle opener at the end.

Requires 2 AA batteries (not included).

- 817292

Date d'impression : 31/07/2025